

## 23.Piston

### A: SPECIFICATION

Refer to “Cylinder Block” for removal and installation procedures of pistons. <Ref. to ME(H6DO)-95, REMOVAL, Cylinder Block.> <Ref. to ME(H6DO)-101, INSTALLATION, Cylinder Block.>